

CARTRIDGE CHANGE REMINDER:

Replace cartridge 12-18 months
from your purchase date.

Purchase Date:

__/__/__

Need Help?

Our support team is here to make sure you are
completely satisfied with your product.

Contact Us?

support@natureshavenshop.com

Nature's Haven
INSPIRED BY PURITY

Nature's Haven® Bath Ball Filter INSTALLATION AND OPERATION GUIDE



Nature's Haven®
Copyright © 2024




HOW TO USE

1. Hang the Bath Ball filter from its hard handle (a) over your bathtub faucet. If you do not have a pull on the top of your bathtub faucet which will keep the Bath Ball from sliding off, wrap the flex handle (included) around the bathtub faucet one time to secure in place. As the tub is filling, water will flow through the filter and out of the bottom with oxygenated, contaminant-free, filtered water.

Note: Insert the Flex or Hard handle into the bath ball holes firmly.

OPERATING SPECIFICATIONS

Pressure Range:	30-60 psi (2.1-4.1 bar)
Temperature Range:	40-110°F (4.4-43.3°C)
Optimum Service Flow:	2-3 gpm at 60psi

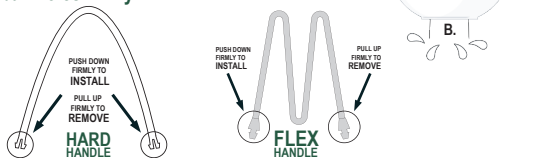

BEFORE USING YOUR BATH BALL

1. Activate filter by running hot water through the Bath Ball cartridge for 2-3 minutes. This will flush loose media fines from bath ball cartridge. Loose media fines in a new cartridge are normal when first used and not harmful.
2. Cool to the desired temperature before entering bath.

MAINTENANCE

Caution: Protect cartridge from freezing temperatures. If freezing temperatures exist, drain unit and set wet replacement cartridge aside to dry. Protect cartridge from direct sunlight.

BEFORE USING YOUR BATH BALL FILTER

Easily replace the filter cartridge (c) every 12-18 months depending on consumption and water conditions. Harsher water conditions will require more frequent changing of the replacement cartridge.

CARTRIDGE REPLACEMENT

1. Unscrew the Bath Ball filter (Fig 1).
2. Replace the used cartridge with the new replacement cartridge (Fig 2).
3. Screw the housing back together (Fig 3).
4. Run hot water for 2-3 minutes to flush media fines from bath ball cartridge. Loose media fines in a new replacement disk are normal and will be flushed out when in use.

Do not use non-Nature's Haven® replacement cartridges.
Do not use non-Nature's Haven® parts or modify/tamper with unit.

BACK FLUSHING

Back flushing extends the life of your cartridge. Running water the opposite way through the cartridge will restore optimum service flow and ensure premium contact time with the media.

1. Unscrew the filter housing.
2. The replacement cartridge can be used inversely. Simply remove the replacement cartridge and reverse it by turning it around.
3. Reassemble the housing as per the instructions.
4. Use as normal.

